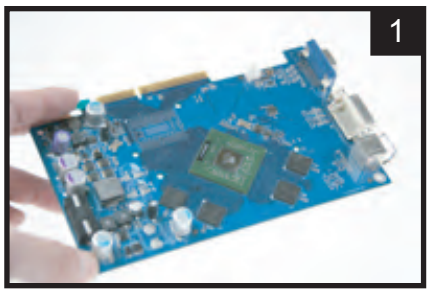

Remove the original VGA cooler.

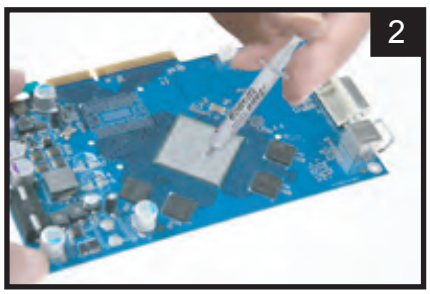

Apply an appropriate amount of thermal grease to the CPU.

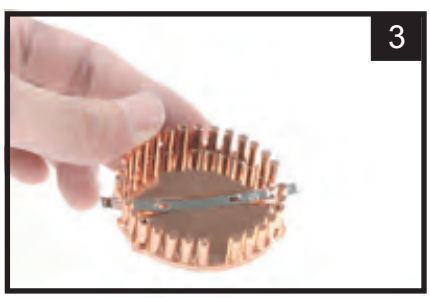

Select a suitable clip and place it onto the heatsink.

Tighten the fan.

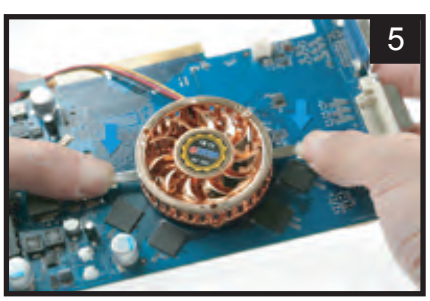

Push the push pins into the mounting holes.

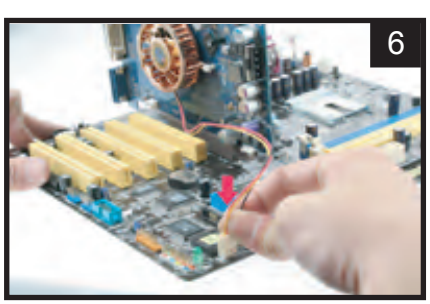

Connect the power connector to the fan header on the motherboard.